# **Panasonic**®

**Digital Proprietary Telephone** 

# **User Guide**

Model No. KX-T7667



Please read this guide before using and save for future reference.


Document Version: 2006-02




Feature	Operation				
Making Calls					
Calling	To an extension  To an outside party  extension no.    ((i)  (i)  (iii)  (iii)				
Redial	► Cut				
Quick Dialing	w quick dial no. ► ¶("\\\\-\'z'				
One-touch Dialing	To store  PROGRAM  O  L(CC)  CC)  CC)  CC)  CC)  CC)  CC)  C				
	assigned as a One-touch Dialing button				
Operator Call	<b>&gt; 0 ► (</b> (1/2)				
Personal Speed Dialing	To store  personal speed dial no. (2 digits)  desired no. (max. 32 digits)  # C. Tone				
	To dial AUTODIAL  To dial AUT				
System Speed Dialing	To dial AUTODIAL  System speed dial no. (3 digits)  Fig. 4.5				
Doorphone Call	★ 3 1 ► doorphone no. (2 digits)				
Automatic Callback Busy	To set While hearing a busy tone  C. Tone  To answer from an idle extension While hearing a callback ring  R.B. Tone  To cancel  X 4 6 C. Tone  To answer from an idle outside line While hearing a callback ring  Outside phone no.  In cancel  To answer from an idle outside line While hearing a callback ring  Outside phone no.				
During a Conversation					
Call Hold	To hold To retrieve a call at the holding extension				

Feature	Operation				
	During a Conversation				
Call Transfer	TRANSFER C. Tone (CO) Local Description (CO) Country To an extension To an outside party To an outside party				
Useful Features					
Off-hook Monitor	To set/cancel During a conversation using the handset				
Call Park	To set  TRANSFER  C. Tone  TRANSFER  C. Tone				
	To retrieve  stored parking zone no. (2 digits)  C. Tone				
	To add other parties during a conversation				
Multiple Party Conversation	desired phone no.  desired phone no.  Talk to the new party.  C. Tone  Talk with multiple parties.				
	To leave a conference				
	C. Tone				
Call Pickup	► (ass)  Example 1				
Sending a Call Waiting Tone	While hearing a busy tone  1 ▶ Wait for an answer. ▶ \$\( \begin{align*} \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\				
Answering a Call Waiting	To hold the current call then talk to the new party  HOLD    MITTERCOM				


<sup>\*</sup> Disregard this step if both parties are extensions.

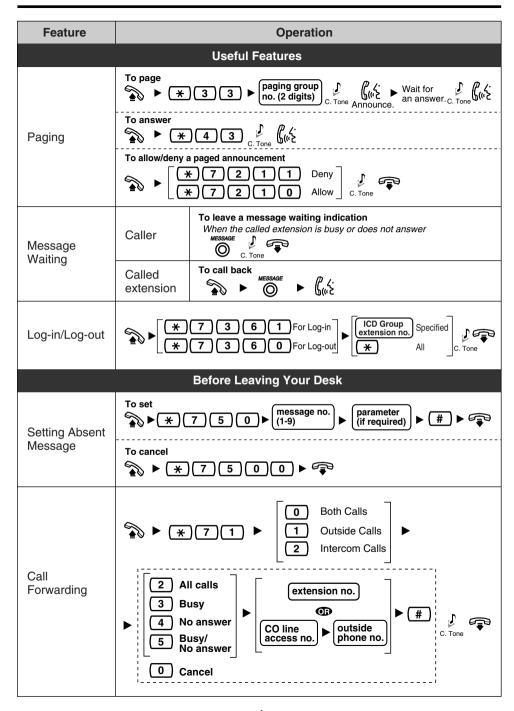

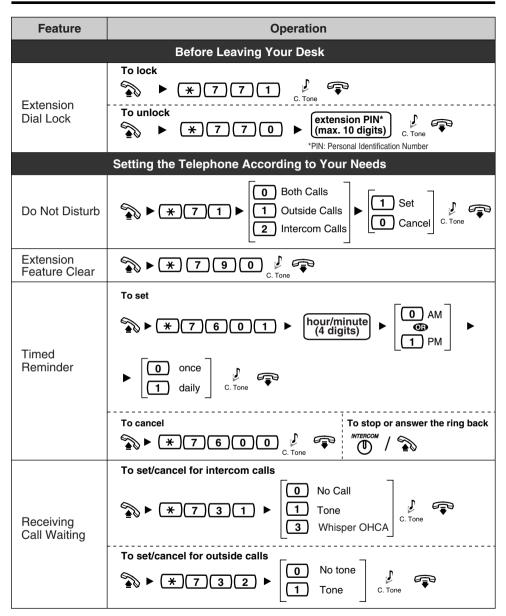



- For more details, refer to the Business Telephone System User Manual or consult your dealer.
- You can change the flexible CO buttons to the feature buttons.
- "Location of Controls" is shown on pages 6-7.

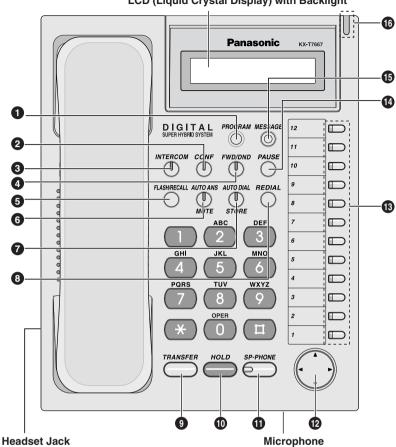

LCD (Liquid Crystal Display) with Backlight

- **1 PROGRAM:** Used to enter and exit the personal programming mode.
- **2 CONF (Conference):** Used to establish a multiple party conversation.
- 3 INTERCOM: Used to make or receive intercom calls.
- FWD/DND (Call Forwarding/Do Not Disturb): Used to perform Call Forwarding or Do Not Disturb.
- **FLASH/RECALL:** Used to disconnect the current call and make another call without hanging up.

- 6 AUTO ANS (Auto Answer)/MUTE: Used to receive an incoming call in hands-free mode or mute the microphone/handset during a conversation.
- AUTO DIAL/STORE: Used for System/Personal Speed Dialing or storing program changes.
- 8 REDIAL: Used to redial the last dialed number.
- TRANSFER: Used to transfer a call to another party.
- 10 HOLD: Used to place a call on hold.

### Location of Controls

- **SP-PHONE (Speakerphone):** Used for the hands-free operation.
- Navigator Key: Used to adjust the volume and select desired items for each function
- Flexible Outside (CO) Line Button:
  Used to make or receive an outside
  call. Pressing this button seizes an
  idle outside line automatically. (Button
  assignment is required.) Also used as
  feature buttons. (Button assignment is
  required.)
- **PAUSE:** Used to insert a pause during dialing.

- MESSAGE: Used to leave a message waiting indication or call back the party who left the message waiting indication.
- Message/Ringer Lamp: When you receive a call, the lamp flashes red. When someone has left you a message, the lamp stays on red.

### **Setting**

 
#### ◆Speaker/Ringer/Handset/Headset Volume

Speaker Volume	While in hands-free conversation	
Ringer Volume	While on-hook or receiving a call	
Handset/Headset Volume	While using the handset or headset	Press UP or DOWN.

#### ◆LCD Contrast/Headset Mode




#### ◆Ring Tone



<sup>\*1</sup> The ring tone pattern of patterns 09 to 30 is the same as pattern 01.

### **♦**LCD Backlight

 

# Settings on the Programming Mode

To enter the program mode			To exit				
PROGRAM			PROGRAM				
Operation							
Loop-CO (L-CO)	(co) ►	★ ► AUTO DIAL STORE		FWD/DND - Both calls	(co) ► [	4 1 •	AUTO DIAL STORE
Single-CO (S-CO)	(co) ►	O CO line no. ▶	AUTO DIAL STORE	FWD/DND - Outside calls	(co) ► (	4 2 ▶	AUTO DIAL STORE
Direct Station Selection	(co) ►	1 extension no.	AUTO DIAL STORE	FWD/DND - Intercom calls	(co) ► (	4 3 ▶	AUTO DIAL STORE
One-touch Dialing	(co) ►	2 desired no.	AUTO DIAL STORE	Account	(co) ► (	4 8 ▶	AUTO DIAL STORE
Incoming Call Distribution Group (ICD Group)	(co) <b>&gt;</b>	3 0 ▶	AUTO DIAL	Conference	(co) <b>\</b>	4 9 ▶	AUTO DIAL STORE
	<b>▶</b> [10	CD Group no.	STORE	Log in/ Log-out	(co) ► [	5 5 ▶	AUTO DIAL STORE
Preferred Line Assignment-O	utgoing	1 9 No Auto Dia	<b>▶</b>  \ <del>_</del>	+ CO button no	Ar D. / (co) A bu	o line n idle outside line CO/ICD Group utton tercom	AUTO DIAL  STORE
Preferred Line Assignment-Ind	coming	2 0 ► U STORE	▶   1	<u> </u>	ו ק ים / ב	No line The longest inging line An assigned outside button	AUTO DIAL  STORE
Alternate Rece Ring/Voice	iving-	2 1 ► UD STORE		Directly (Voice	•	AUTO DIAL.  STORE	
Call Waiting for Outside calls		3 0 ► 0 No (No tone) / 1 Yes (Tone) ► 0 STORE					
Call Waiting Selection		3 1 ► ① No Call / 1 Tone/ 3 Whisper OHCA ► ① STORE					
Call Waiting To Type Selection	ne 	3 2 ► U STORE	▶ [□	Tone 1/1	Tone 2	AUTO DIAL  STORE	
Extension PIN [Personal Identi Number] (PIN-max.10 dig		9 0 P U STORE	To cha	an extension PIN NUTO DAL ION PIN STORE nge a stored extension PIN ▶ new I	_	ew one AL ► same PIN	AUTO DIAL  STORE
Station Program	mming et	##	D DIAL ORE	AUTO DIAL STORE			

For your future reference							
,							
SERIAL NO. — DATE OF PURCHASE — (found on the bottom of the unit)							
NAME OF DEALER							
DEALER'S ADDRESS							
DEALER'S TEL. NO.							

Panasonic Consumer Electronics Company, Division of Panasonic Corporation of North America One Panasonic Way, Secaucus, New Jersey 07094

Panasonic Puerto Rico, Inc.

Ave. 65 de Infantería, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985

http://www.panasonic.com/csd

© 2006 Panasonic Communications Co., Ltd. All Rights Reserved.